

# INSTALLATION MICRO SD CARD

INSTALLATION OF A MICRO SD CARD INTO A DOMERA® CAMERA





## Inserting a micro SD card

- ▶ The card slot is located on the camera ring below the seal with the SD label.



- ▶ Carefully remove the rubber cover of the SD slot with an Allen key (3).

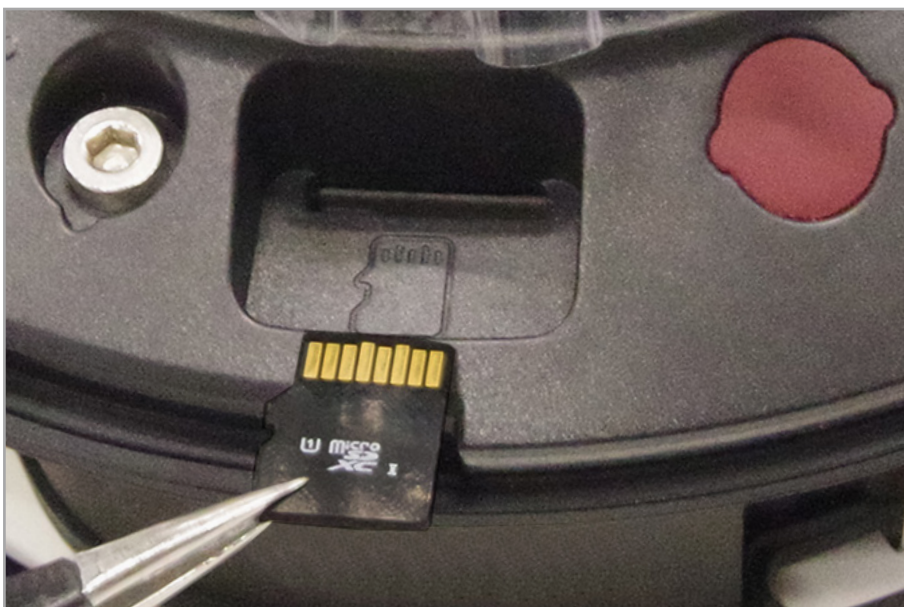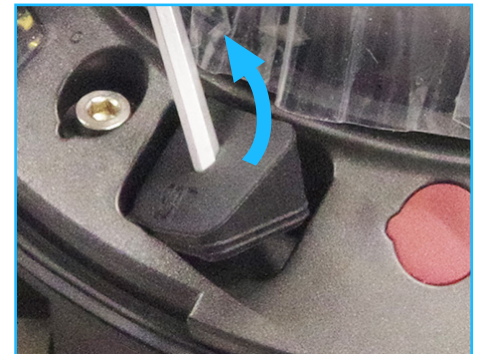


- ▶ Use tweezers to insert the micro SD card. Pay attention to the orientation of the SD card as indicated on the embossing of the card slot.



# INSTALLATION MICRO SD CARD

INSTALLATION OF A MICRO SD CARD INTO A DOMERA® CAMERA

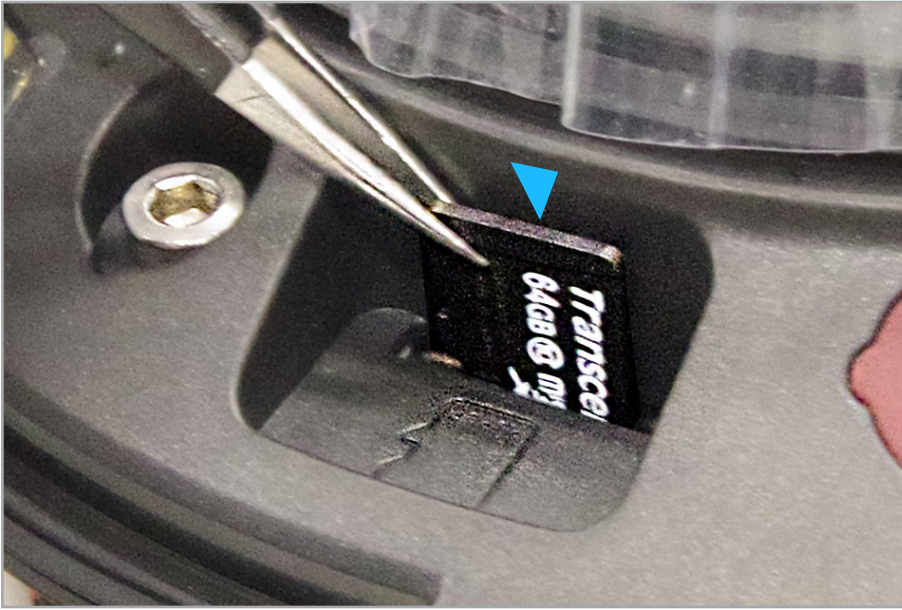

- ▶ Push the SD card completely into the slot by using tweezers and press it firmly until it clicks into place.



- ▶ Place the SD rubber seal back onto the recess and press it firmly into place with your finger.

The installation is complete.

