


SeMSy® Live Alarm Application

HEMISPHERE® SeMSy® Live Alarm Application for automatic display of associated cameras when alarm messages arrive on a HEMISPHERE® SeMSy® Workstation



The HEMISPHERE® SeMSy® Video Management System combines the proven concept of its predecessors with new **dynamics and flexibility**. The optimized license model with administration on the central HEMISPHERE® Backbone Server allows a **simple, fast and secure adaptation and expansion** of the entire system during operation.

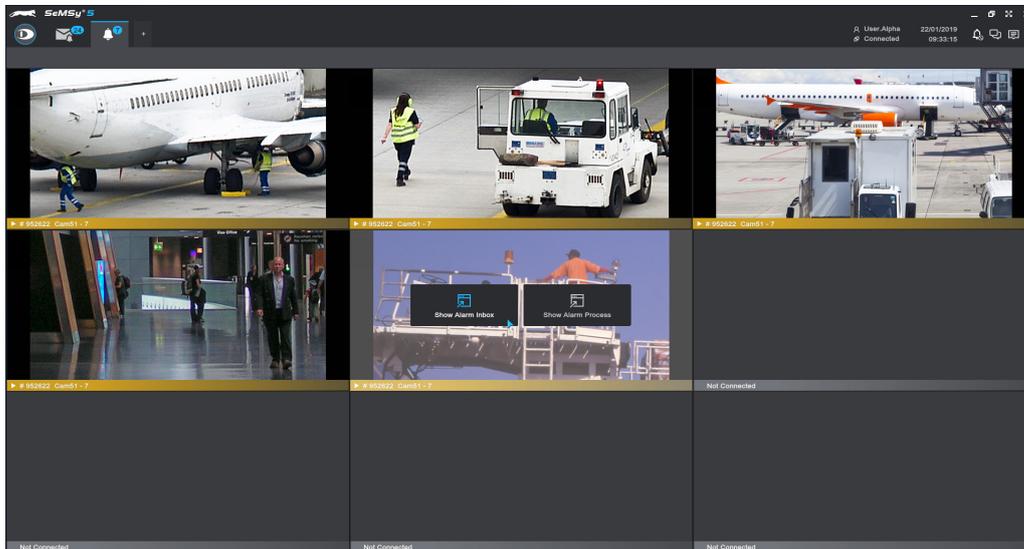

Function

The SeMSy® Live Alarm Application automatically displays the live image of the corresponding camera when an alarm message is received. The operator is thus automatically shown the latest alarm events in the image, immediately upon the arrival of an alarm.

Licensing

The license for the HEMISPHERE® SeMSy® Live Alarm Application is included in the scope of delivery of the HEMISPHERE® SeMSy® Alarm Inbox Application.

Multi-Split Layout

The **Live Alarm** app has a 3 × 3 multi-split layout.

Alarm Series

In the individual splits of the multi-split layout, the camera images of the alarm messages are linked in the order of their arrival. New alarms are always activated in split 1. If all split windows are occupied, the last message is deleted when a new alarm event arrives.

Interaction

Operators have two options for interacting with an alarm event:

- Show Alarm Inbox opens the corresponding alarm message in the Alarm Inbox. All further information on the selected alarm event can be evaluated here.
- Show Alarm Process opens the camera with the corresponding image in a new Surveillance tab, where operators have access to all video functions and can comprehensively evaluate a camera in playback and live.

Both functions can be reached quickly and easily with just one click in the **Live Alarm** application.

