


MONITOR WALLS CONFIGURATION



CREATE GLOBAL VIDEO OUTPUT ON EXTERNAL MONITOR WALLS

The **HEMISPHERE SeMSy® Monitor Walls Application** supports the creation of monitor walls with external monitors in a SeMSy® Video Management System. This handout provides a quick overview of how new monitor walls can be created and configured.

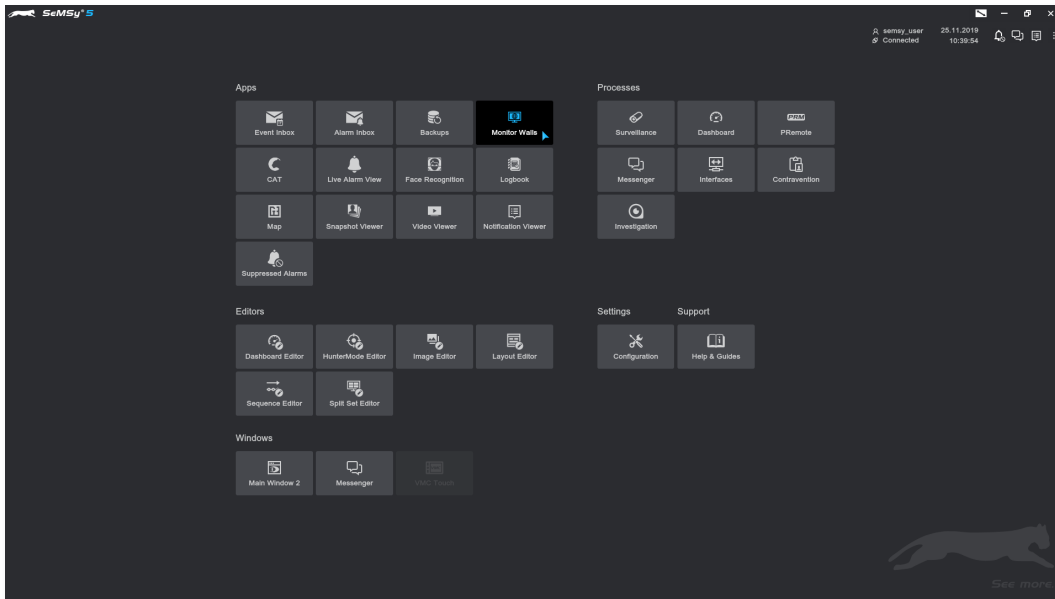

- ▶ Open the **Monitor Walls** application via the corresponding button in the launch menu.

The app is opened in operation mode.


Create New Monitor Wall




- ▶ Click **Edit** in the menu bar to switch the app to configuration mode.
- ▶ Follow the steps below to create a new monitor wall in configuration mode.

MONITOR WALLS CONFIGURATION

CREATE GLOBAL VIDEO OUTPUT ON EXTERNAL MONITOR WALLS

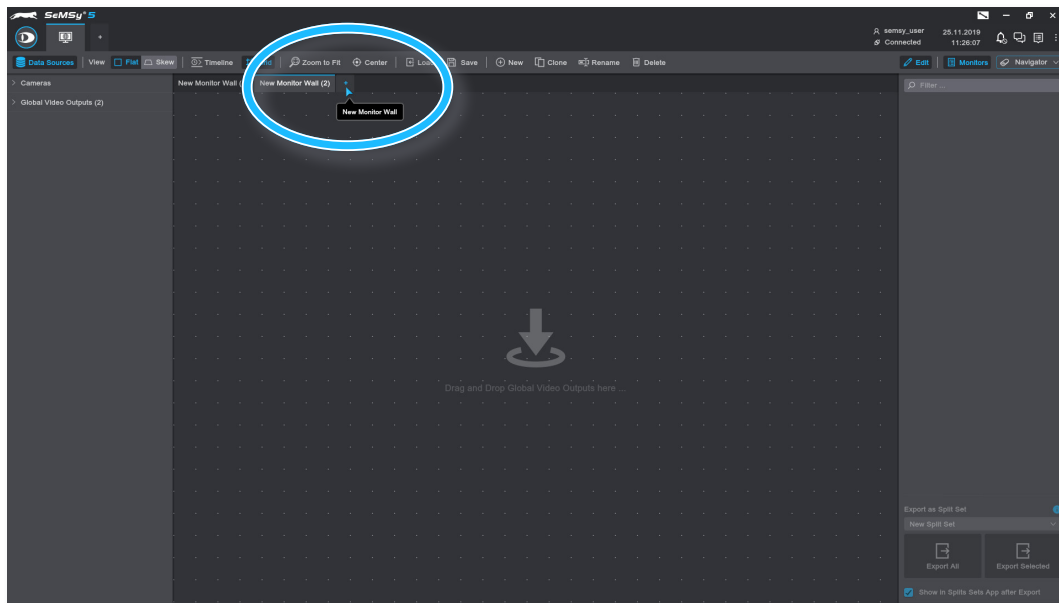


- ▶ Click the + plus button for a new monitor wall.

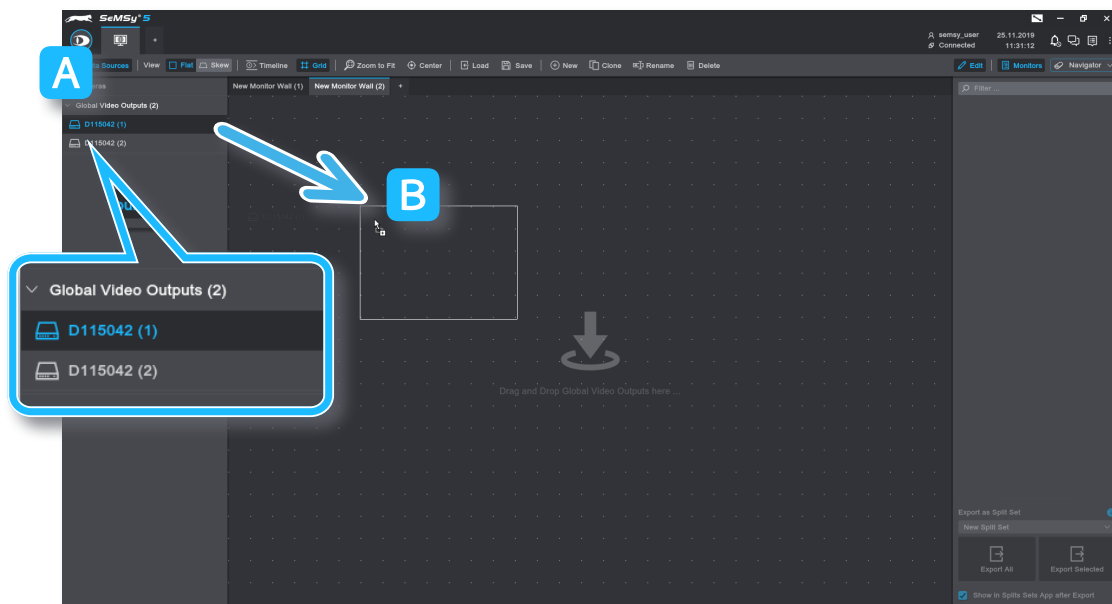

- ▶ Expand the **Global Video Outputs** menu **A** to display the available external monitors.
- ▶ Use dragging and dropping to drag an external monitor from the **Outputs** list to the workstage **B**.


MONITOR WALLS CONFIGURATION

CREATE GLOBAL VIDEO OUTPUT ON EXTERNAL MONITOR WALLS

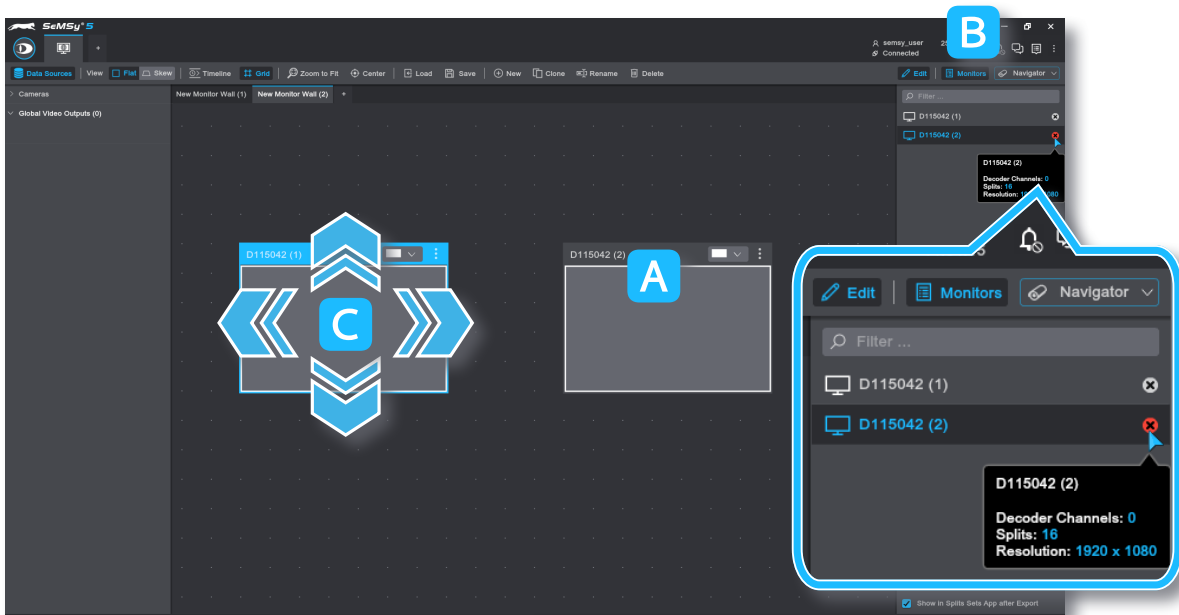

- ▶ Move all required monitors from the **Outputs** list to the workspace **A** you want to use on the new monitor wall.
- ▶ Remove monitors from the workspace via the **Monitors** column **B** if required.
- ▶ Move monitors **C** on the workspace using drag and drop if required.

When all monitors are placed and arranged on the workspace, the monitor wall can be given a name:

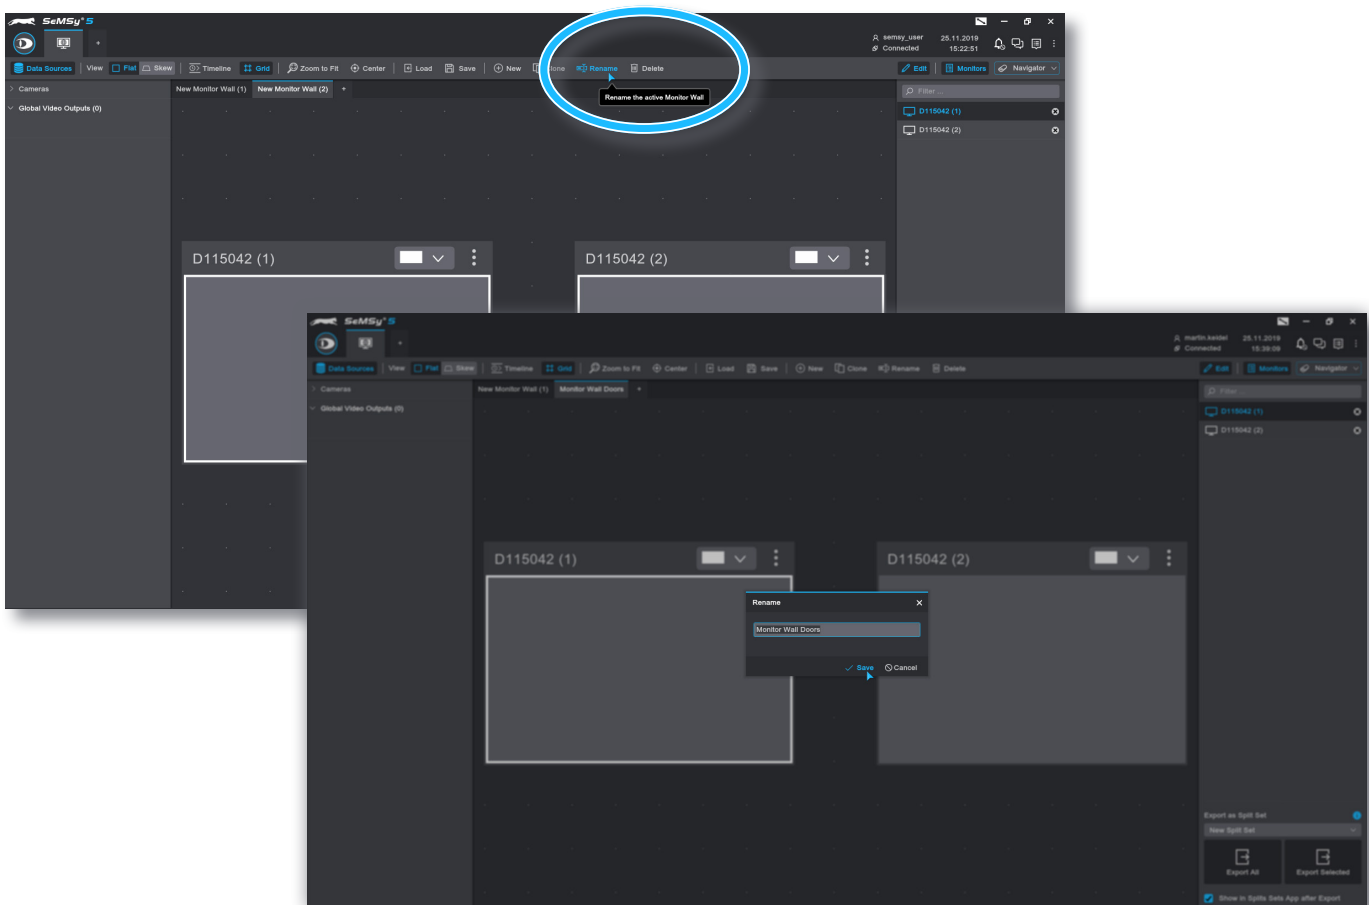

- ▶ Click **Rename** in the menu bar and enter in the subsequent dialog a name for the monitor wall.
- ▶ Confirm the **Rename** dialog with **Save**.

MONITOR WALLS CONFIGURATION

CREATE GLOBAL VIDEO OUTPUT ON EXTERNAL MONITOR WALLS



The new monitor wall can now be saved:



- ▶ Click **Save** in the menu bar to archive it.

The new monitor wall is now basically ready for use and can be operated in a HEMISPHERE SeMSy® Video Management.


Operators on other SeMSy® Workstations can now use the new monitor wall.

Monitor Walls Access

Access to monitor walls can be defined individually for each wall or assigned globally via privileges in the HEMISPHERE SeMSy® Configuration Application.

- ▶ First, open the corresponding Configuration app.

Individual Monitor Wall

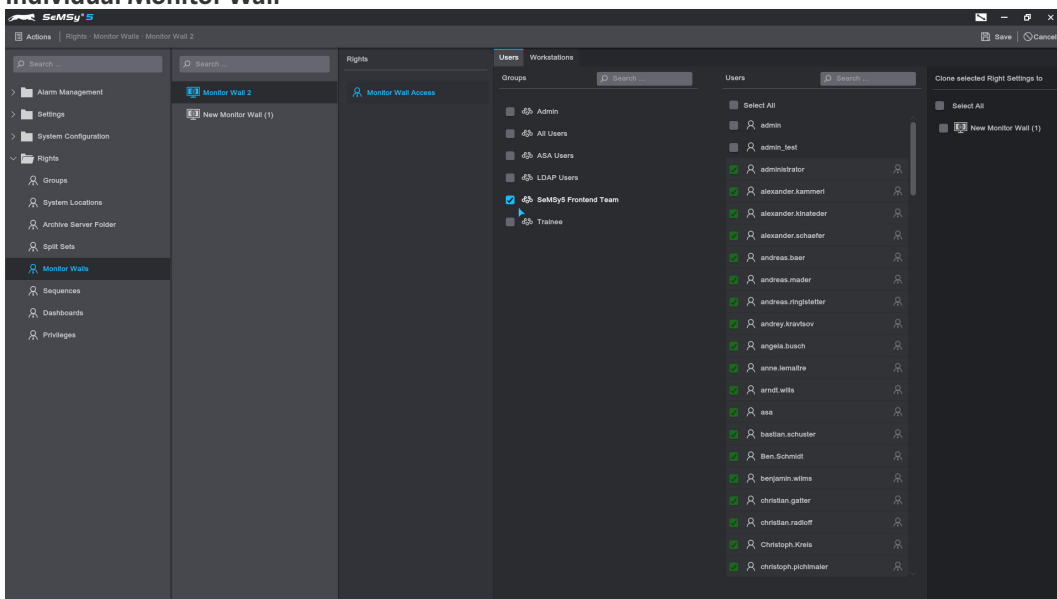


- ▶ Assign access to individual monitor walls for users and/or workstations via **Rights > Monitor Walls**.

MONITOR WALLS CONFIGURATION

CREATE GLOBAL VIDEO OUTPUT ON EXTERNAL MONITOR WALLS



Global Access

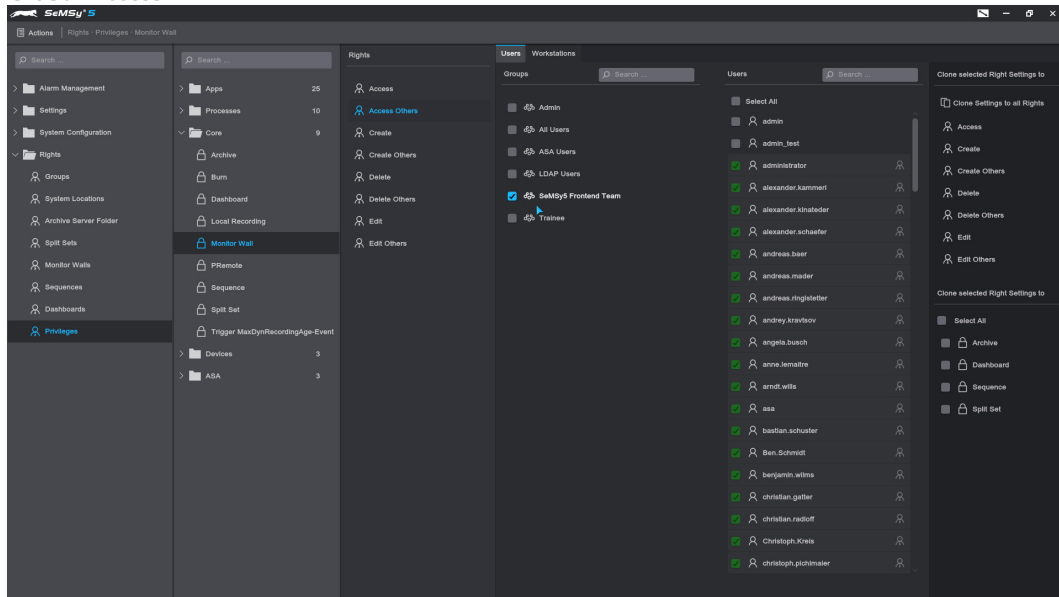

- Open **Privileges > Core > Monitor Wall** to set global rights for all monitor walls.

 *Note that globally set rights always overwrite individual authorizations.*

- Select the required rights and define them for users and/or workstations.

Dallmeier electronic GmbH & Co.KG | Bahnhofstr. 16, 93047 Regensburg, Germany | +49 941 8700-0 | dallmeier.com

All trademarks identified by ® are registered trademarks of Dallmeier electronic GmbH & Co.KG.

Third-party trademarks are named for information purposes only. Dallmeier electronic respects the intellectual property of third parties and always attempts to ensure the complete identification of third-party trademarks and indication of the respective holder of rights. In case that protected rights are not indicated separately, this circumstance is no reason to assume that the respective trademark is unprotected.

Specifications subject to change without notice. Errors and misprints excepted. Pictures may differ from the actual product.



© 2019 Dallmeier electronic V1.0.0 2019-11-18 5/5

MADE IN GERMANY 

