


# Mountera® In-Ceiling Adapter W8

Conversion of a Panomera® W8 for in-ceiling installation with the Mountera® In-Ceiling Adapter

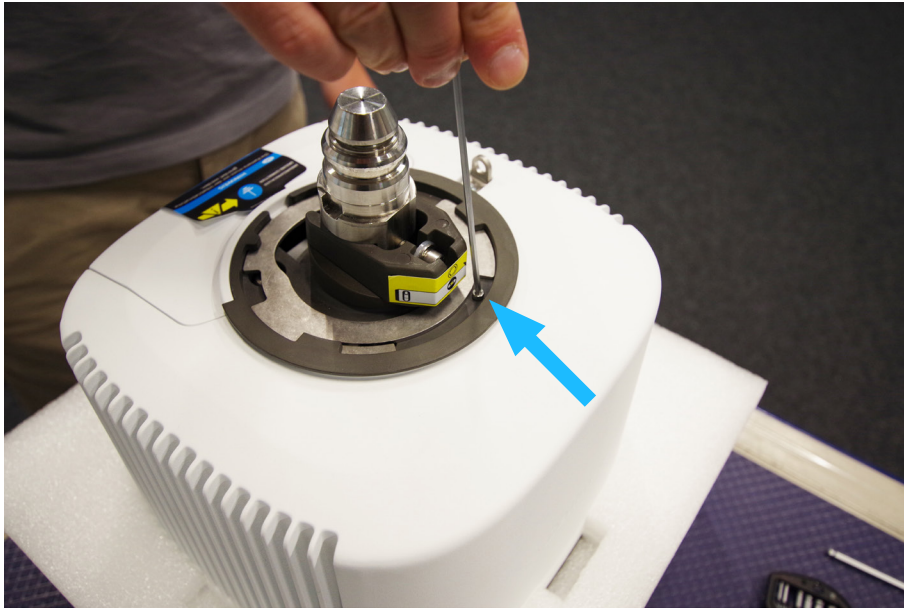


## Preparation Panomera® W8

Remove the screw of the locking ring.



Turn the locking ring to this position.


Remove the locking ring.

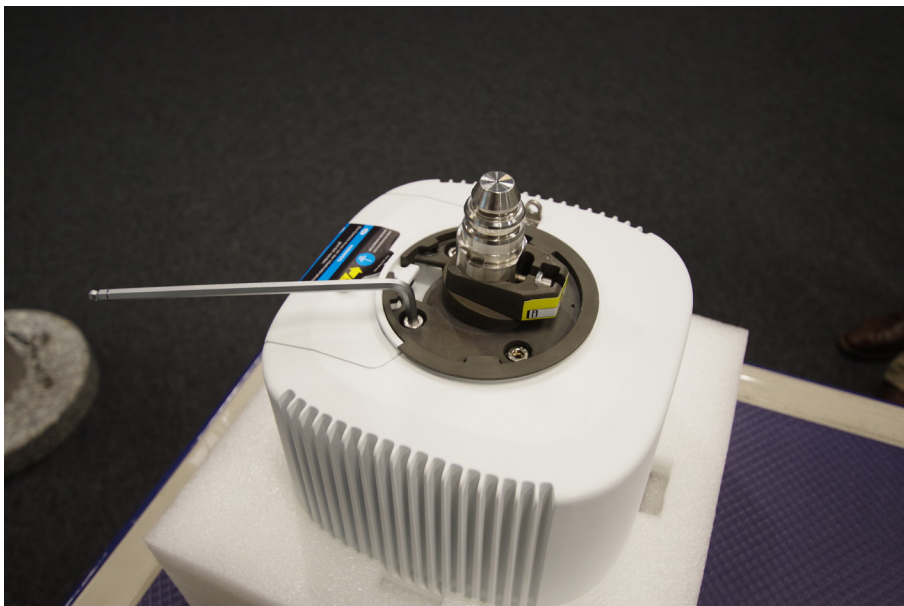


Remove the 4 screws of the Mountera® Plug.

# Mountera® In-Ceiling Adapter W8


Conversion of a Panomera® W8 for in-ceiling installation with the Mountera® In-Ceiling Adapter

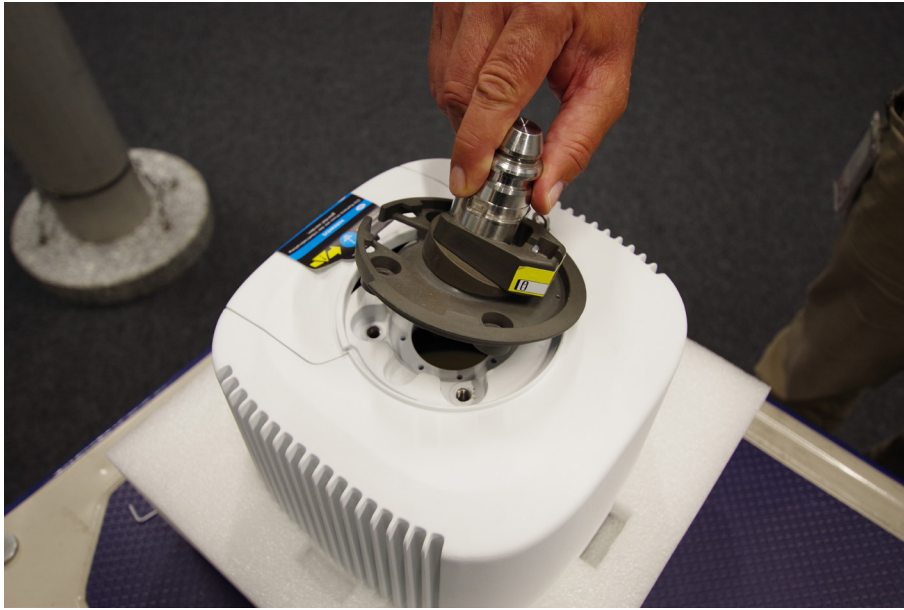

Remove the Mountera® Plug.

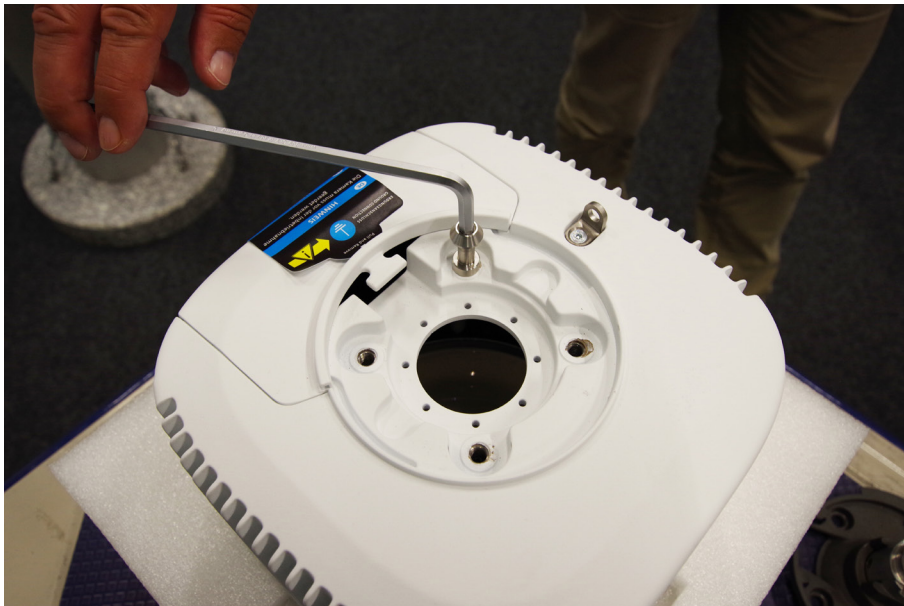

Assemble the 4 bolts of the Mountera® In-Ceiling Adapter.

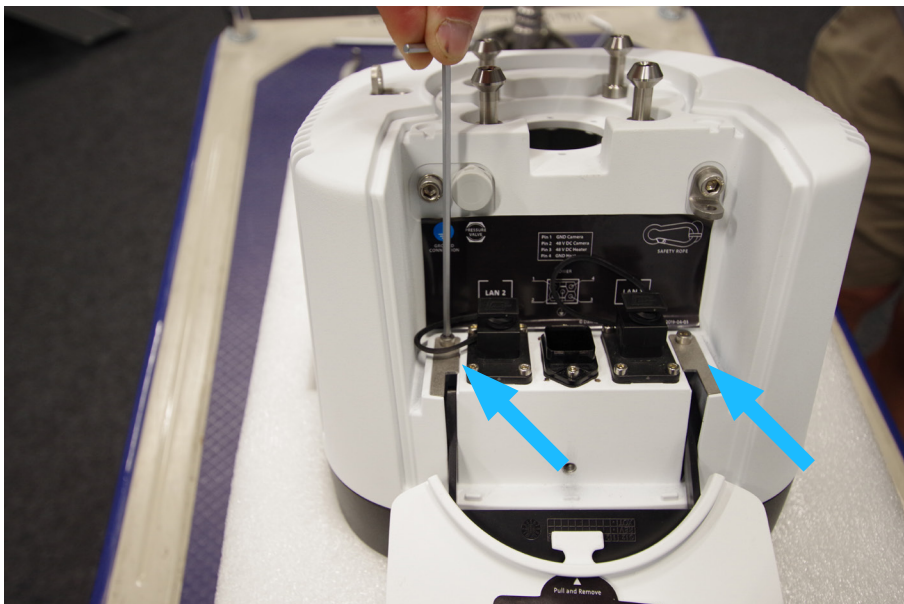


Open the cover of the housing.


Remove both locking devices of the cover.

# Mountera® In-Ceiling Adapter W8


Conversion of a Panomera® W8 for in-ceiling installation with the Mountera® In-Ceiling Adapter

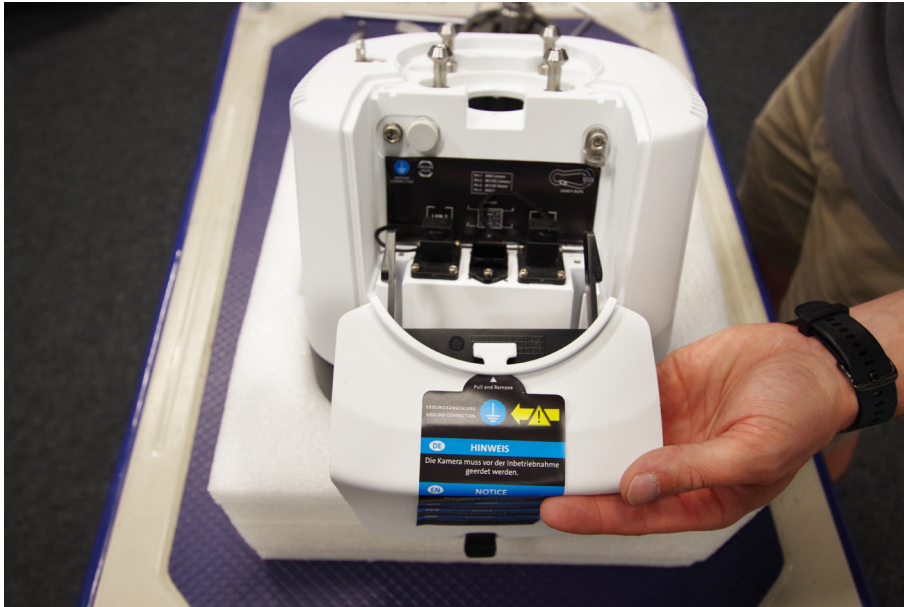

Remove the cover.

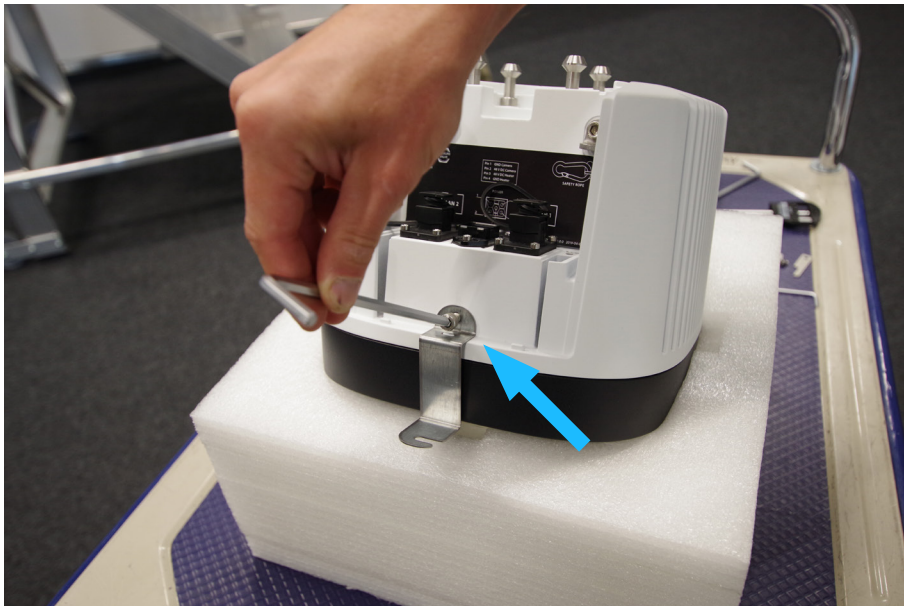


Assemble the securing bracket of the Mountera® In-Ceiling Adapter.

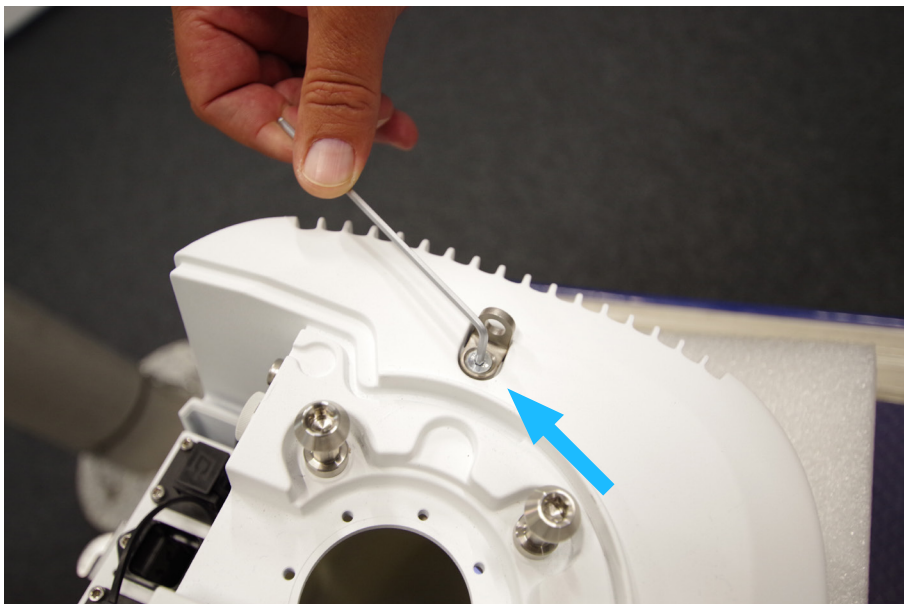

Remove the holder of the safety rope.

# Mountera® In-Ceiling Adapter W8

Conversion of a Panomera® W8 for in-ceiling installation with the Mountera® In-Ceiling Adapter

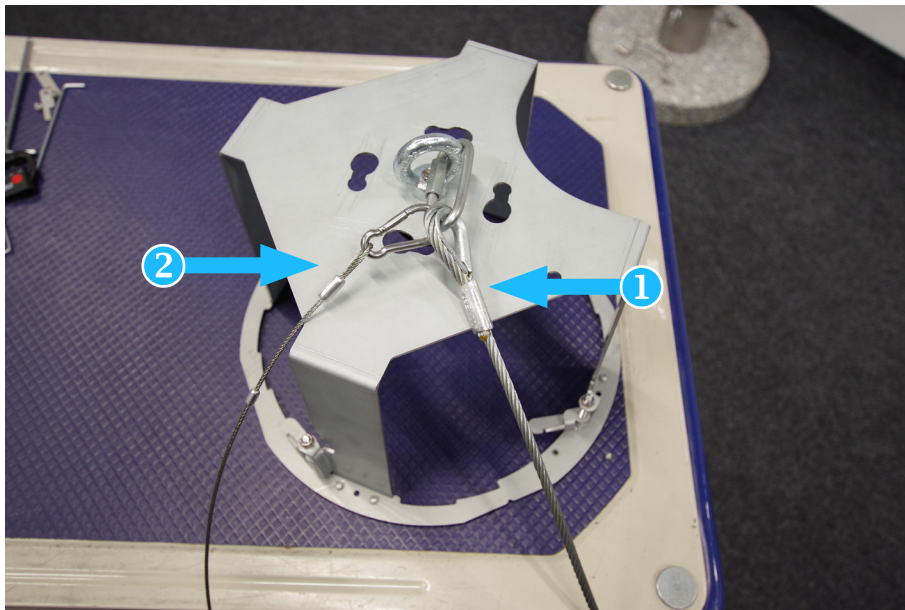


## Installation Mountera® In-Ceiling Adapter

Attach the safety rope of the Mountera® In-Ceiling Adapter ❶.

Attach the safety rope of the Panomera® ❷.

Please note:

- Check the load capacity of the ceiling panel
- Hole diameter ceiling panel 31.5 cm
- Minimum installation depth from the outside of the ceiling panel 25 cm

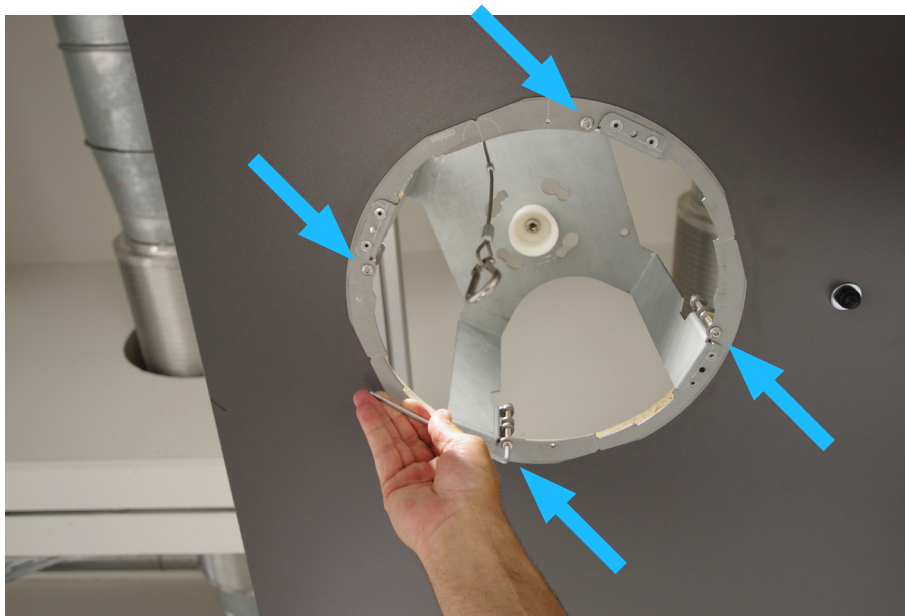


Attach the safety rope of the Mountera® In-Ceiling Adapter ❶ to a suitable place on the ceiling.

Install the Mountera® In-Ceiling Adapter in the suspended ceiling.

# Mountera® In-Ceiling Adapter W8


Conversion of a Panomera® W8 for in-ceiling installation with the Mountera® In-Ceiling Adapter

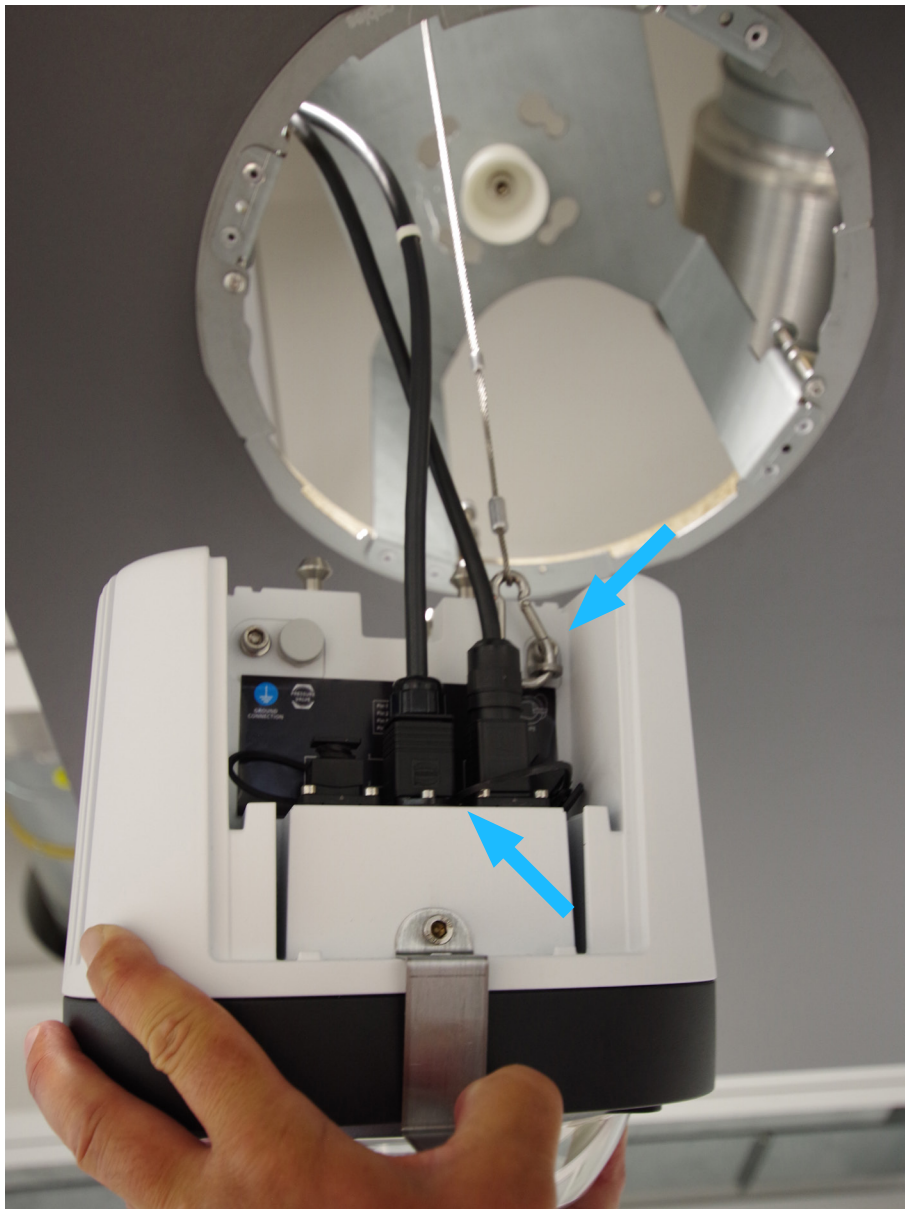

## Installation Panomera® W8

Connect the cables.

Attach the safety rope.

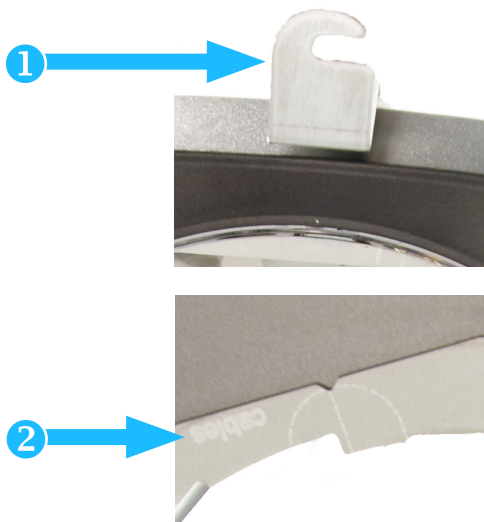


Make sure that the Panomera® is correctly aligned before you insert it into the adapter.

The securing bracket **1** on the Panomera® must be on the same side as the label **cables 2** on the adapter.

# Mountera® In-Ceiling Adapter W8

Conversion of a Panomera® W8 for in-ceiling installation with the Mountera® In-Ceiling Adapter

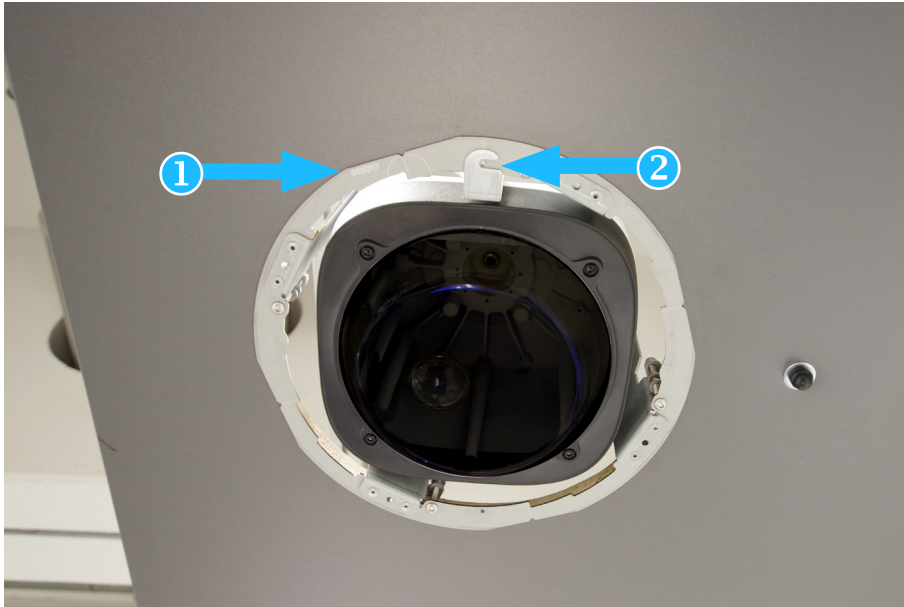

Insert the Panomera® into the Mountera® Adapter.

Turn the Panomera® clockwise until it is fixed.


Make sure that the securing bracket **1** is on the same side as the label **cables 2**.



Secure the Panomera® with the securing bracket of the Mountera® Adapter.

# Mountera® In-Ceiling Adapter W8




Conversion of a Panomera® W8 for in-ceiling installation with the Mountera® In-Ceiling Adapter

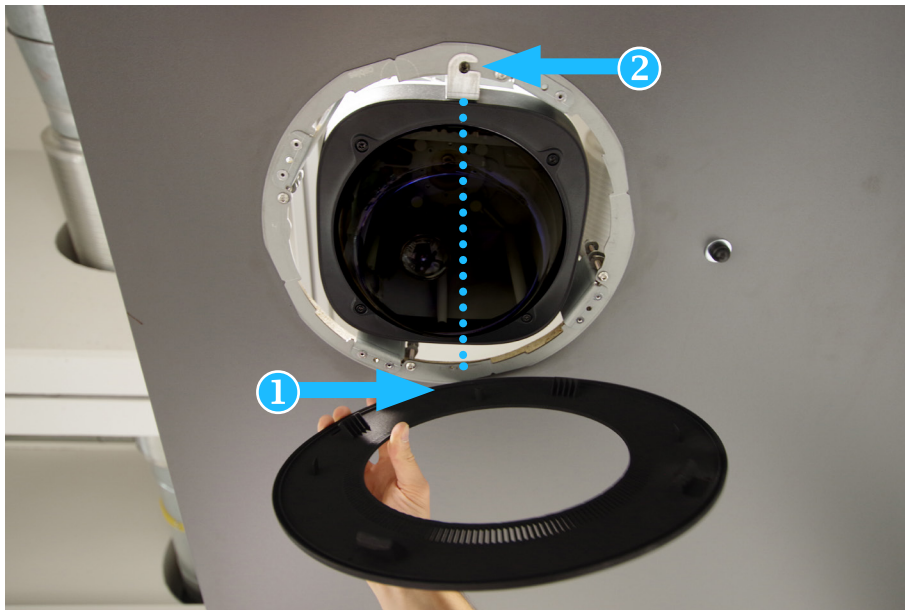

## Installation Housing Ring

Pay attention to the alignment of the bolt in the housing ring ❶ and the securing bracket ❷.

These must be exactly opposite each other.

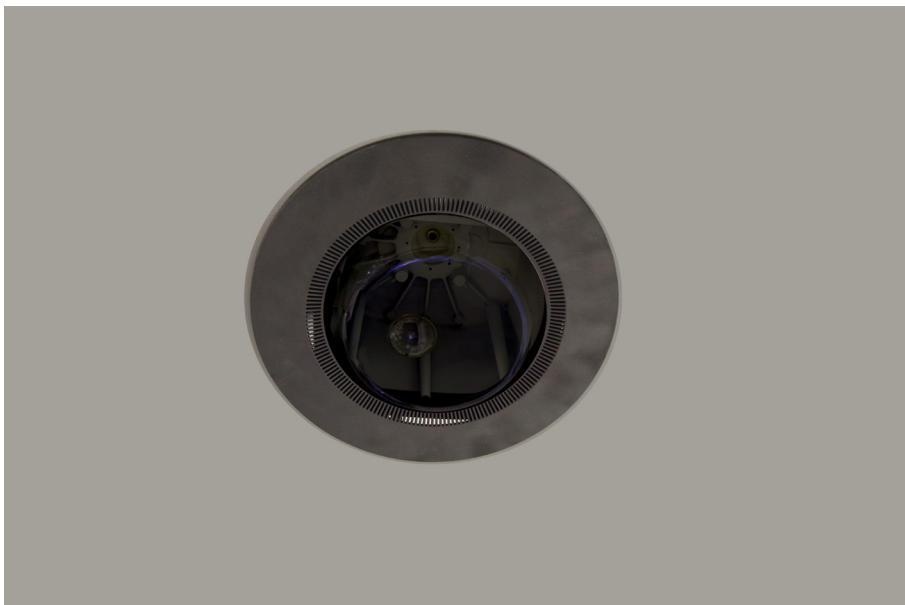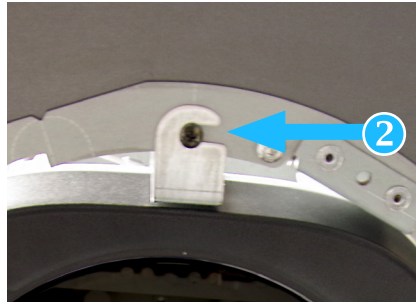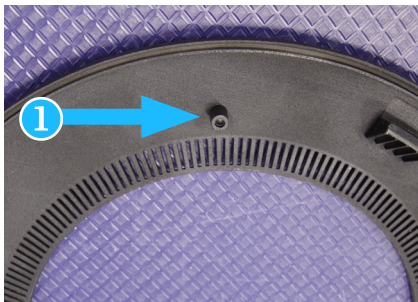

Place the housing ring on the adapter.

Turn the housing ring clockwise until it is fixed.